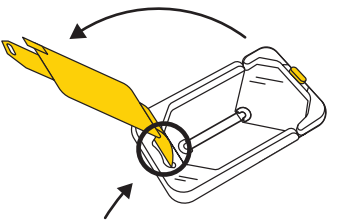
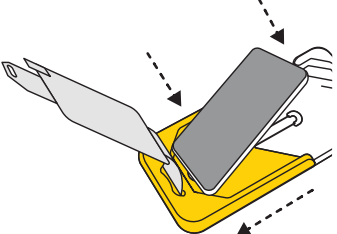
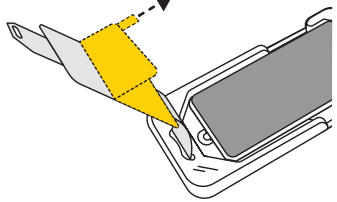
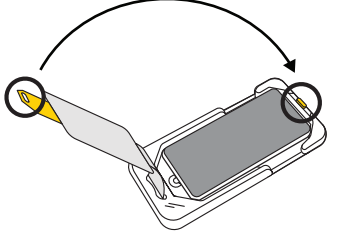
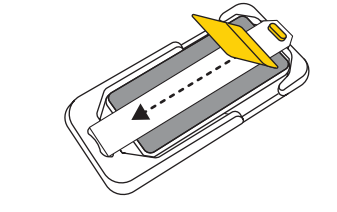
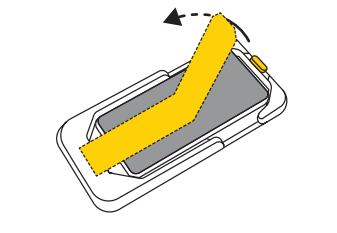


Screen Protection Universal Alignment Tool Install Steps - Alpha Flex

1	Lift* *If screen protector is disconnected from tray, reinstall into bottom slot.	
2	Slide tray down using phone, insert phone in the tray and clean phone (see cleaning kit).	
3	Remove film with tab ①.	
4	Secure screen protector tab to top peg.	
5	Firmly press and swipe down.	
6	Release tab from peg, pull the liner from the glass.	
7	Press out bubbles.	